

Part	Description	QTY	
EC1800-103	Transformer	1	
EC1800-108	X/Y Motor	1	
EC1800-136	Paper Feed Coupling/Clutch & Coupler	1	
EC1800-282	Knurled Shaft Eclipse 36E Only	1	
EC1800-301	Main PCB Mod 5.2	1	
EC1800-302	Eclipse Keypad PCB	1	
EC1800-563	Coupling, X drive shaft (20mm O/D 1/4" & 6mm bores)	1	
EC1800-564	Y Limit Switch	1	
EC1800-700	E-PROM	1	
EC1800-800	Operation Manual Eclipse 72/36 & 36E	1	
EE0800-204	Timing Belt 4500 x 10 mm x 2.5 mm Pitch (Carriage)	1	
EE1800-187	Pulley 10 Teeth, 6.35 mm bore, hub & Flange	1	
EE1800-188	Copper Dis-Charge Spring	1	
MSFH/16	Coupling	1	
NE0800-103	Transformer	1	
NE1800-105	Fan	1	
NE1800-110	Top Cover Bracket	1	
NE1800-196	Dancer Channel Rear Feed Sprung Stops inc Channel	2	
NE1800-266	Pinchwheel Rear Screw Pin Fixed	1	
NE1800-267	Pinchwheel Rear Screw Pin Adjustable	1	
NE1800-268	Knob - Pinchwheel Rear	1	
NE1800-269	Pinchwheel Complete Assy. Slide Type	2	
NE1800-273	Knurled Shafts (Short) (2 set screws)	1	
NE1800-274	Knurled Shafts (Long) (300mm long)	1	
NE1800-276	Pen Cord Idle Pulley	1	
NE1800-278	Knurled Shafts (Short)	1	
NE1800-279	Knurled Shafts (Long)	1	
NE1800-333	Stand Up-Rights	1	
NE1800-604	Pen Up/Down Cord, 4600 mm	1	
NE2000-900	USB to Serial Port Adaptor	1	
NE2000-901	Castors	1	
TX0800-100	Plotter Bed Tape - 1 Roll Clear	1	
TX0800-101	Plotter Bed Tape - 1 Roll Cloth	1	
TX0800-101A	Two Part Plotter Bed Tape 1 Roll Cloth 1Roll Clear	2	
TX1800-110	Feed/Take-Up Motor (125 RPM, 12V)	1	
TX1800-112	Power Inlet/Switch/Fuse	1	
TX1800-113	Bearing Spacer 6 mm Shaft 0.4 mm	1	
TX1800-114	RS232 Screw Locks	2	
TX1800-115	Coupling Take-Up/Feed Drive	1	
TX1800-116	2A Fuse	10	
TX1800-119	Keypad (Black) Push Button	1	
TX1800-121	Servo Motor (Pen Head)	1	
TX1800-123	RS232 Signal Cable	1	
TX1800-123A	Mac Signal Cable	1	
TX1800-126	Retainer	1	
TX1800-127	Feed Bar Cap Free End	1	
TX1800-135	Shaft 75 mm x 6 mm	1	
TX1800-141	Bearing 13 mm o/d 6 mm i/d 5 mm wide Flanged	1	
TX1800-142	Bearing 17 mm o/d 6 mm i/d 6 mm wide	1	

TX1800-143	Bearing 17 mm o/d 6 mm i/d 6 mm wide Flanged	1	
TX1800-144	Bearing 9 mm o/d 4 mm i/d 4 mm wide	1	
TX1800-161	Bearing Plastic, 10 mm i/d	1	
TX1800-190	Paper Core, Drive Ends (Flanges)	1	
TX1800-191	Dancer Bar	1	
TX1800-192	Dancer Bar End Cap	1	
TX1800-193	Paper Roll Take-Up/Feed	1	
TX1800-194	Dancer Bar Rubber Stops	4	
TX1800-195	U' Bracket (Horseshoe no bearings)	1	
TX1800-196	Feed Bar Drive Cap	1	
TX1800-203	Timing Belt 4500 x 10 mm, 5 mm Pitch (Carriage)	1	
TX1800-230	Keypad Connecting Cable 5 Way	1	
TX1800-240	LED Harness	1	
TX1800-250	Spring, Carriage	1	
TX1800-251	Spring, Pen Return	1	
TX1800-252	Spring, Take-up/Feed Pole End	1	
TX1800-253	Spring, Pinchwheel Assy.	1	
TX1800-270	Pinchwheel Complete Assy.	2	
TX1800-271	Pinchwheel - Rubber Wheel inc. Bearings	1	
TX1800-500	Processor PCB	1	
TX1800-555	Carriage Wheel & Bearing	1	
TX1800-601	Pen Head/Carriage	1	
TX1800-602	Pen Head 'Remote'	1	
TX1800-603	Carriage Slide	1	
TX1800-801	Maintenance Manual	1	
TX1800-901	Pen Adaptor (Bic)	1	
TX1800-902	Pen Adaptor (Pentel)	1	
TX1800-903	Pen Adaptor Plastic Screw	1	
TX1800-904	Pen Holder Bracket (Jaw)	1	
TX1800-909	72" Top Cover	1	
X22CEprom	Calibration I.C & EPROM	1	